

TECHNICAL BULLETIN

TB-045 • June 2010


Ultra kingpin tool instructions KIT-ULTRA-KP

The king pin tool can be used in several configuration depending on fifth wheel product; therefore, it may be necessary to change the position of the lever assembly for use with a certain fifth wheel. Be sure to tighten all hardware securely before use. Image below is shown for a left side opening fifth wheel, if a right hand side is required the lever arm will need to be installed opposite.

To determine position of lever:

Use rear position
for Ultra LT top plate
(rear position shown in
illustration at right)

Use front position
for Ultra HD and
Ultra HR top plates

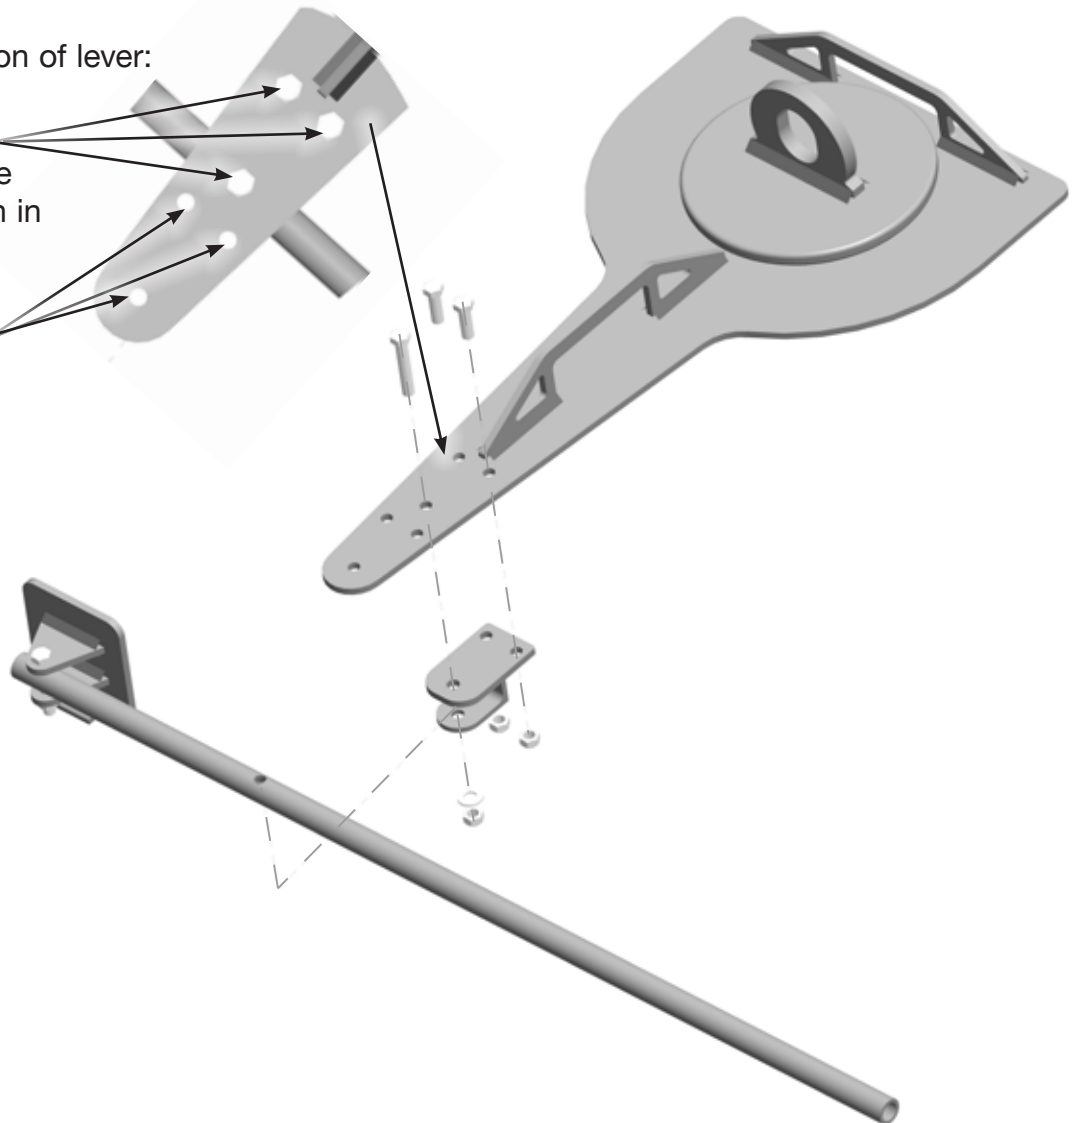

See next page

TECHNICAL BULLETIN

TB-045 • Page 2

Shown set up for
Ultra HD and Ultra
HR top plates

