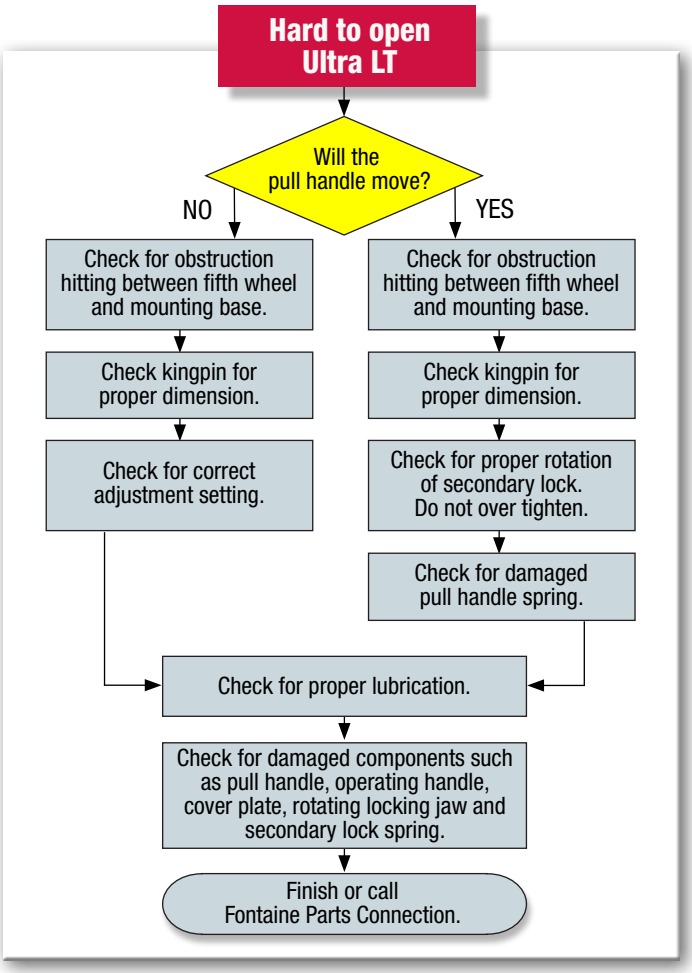
Hard to open Ultra LT
Will the pull handle move?
NO
YES
Check for obstruction hitting between fifth wheel and mounting base.
Check kingpin for proper dimension.
Check for correct adjustment setting.
Check for obstruction hitting between fifth wheel and mounting base.
Check kingpin for proper dimension.
Check for proper rotation of secondary lock. Do not over tighten.
Check for damaged pull handle spring.
Check for proper lubrication.
Check for damaged components such as pull handle, operating handle, cover plate, rotating locking jaw and secondary lock spring.
Finish or call Fontaine Parts Connection.